

Data Path : Z:\pestpcbsrv\HPCHEM1\ECD_P\Data\PP031819\
Data File : PP029352.D
Signal(s) : Signal #1: ECD1A.CH Signal #2: ECD2B.CH
Acq On : 18 Mar 2019 9:55 am
Operator : EI\MA
Sample : HEXANE
Misc : hexane
ALS Vial : 1 Sample Multiplier: 1

Instrument :
ECD_P
ClientSampleId :
HEXANE

Integration File signal 1: sample.E
Integration File signal 2: events2.e
Quant Time: Mar 19 01:46:57 2019
Quant Method : Z:\pestpcbsrv\HPCHEM1\ECD_P\methods\PP022119.M
Quant Title : 8080.M
QLast Update : Fri Feb 22 02:24:04 2019
Response via : Initial Calibration
Integrator: ChemStation 6890 Scale Mode: Large solvent peaks clipped

Volume Inj. : 1 ul
Signal #1 Phase : Rxi-1ms Signal #2 Phase:
Signal #1 Info : 20M x 0.18mm x 0. Signal #2 Info :

Compound	RT#1	RT#2	Resp#1	Resp#2	ng/ml	ng/ml
----------	------	------	--------	--------	-------	-------

System Monitoring Compounds

Target Compounds



(f)=RT Delta > 1/2 Window (#)=Amounts differ by > 25% (m)=manual int.


Data Path : Z:\pestpcbsrv\HPCHEM1\ECD_P\Data\PP031819\
Data File : PP029352.D
Signal(s) : Signal #1: ECD1A.CH Signal #2: ECD2B.CH
Acq On : 18 Mar 2019 9:55 am
Operator : EI\MA
Sample : HEXANE
Misc : hexane
ALS Vial : 1 Sample Multiplier: 1

Instrument :
ECD_P
ClientSampleId :
HEXANE

Integration File signal 1: sample.E
Integration File signal 2: events2.e
Quant Time: Mar 19 01:46:57 2019
Quant Method : Z:\pestpcbsrv\HPCHEM1\ECD_P\methods\PP022119.M
Quant Title : 8080.M
QLast Update : Fri Feb 22 02:24:04 2019
Response via : Initial Calibration
Integrator: ChemStation 6890 Scale Mode: Large solvent peaks clipped

Volume Inj. : 1 ul
Signal #1 Phase : Rxi-1ms Signal #2 Phase:
Signal #1 Info : 20M x 0.18mm x 0. Signal #2 Info :

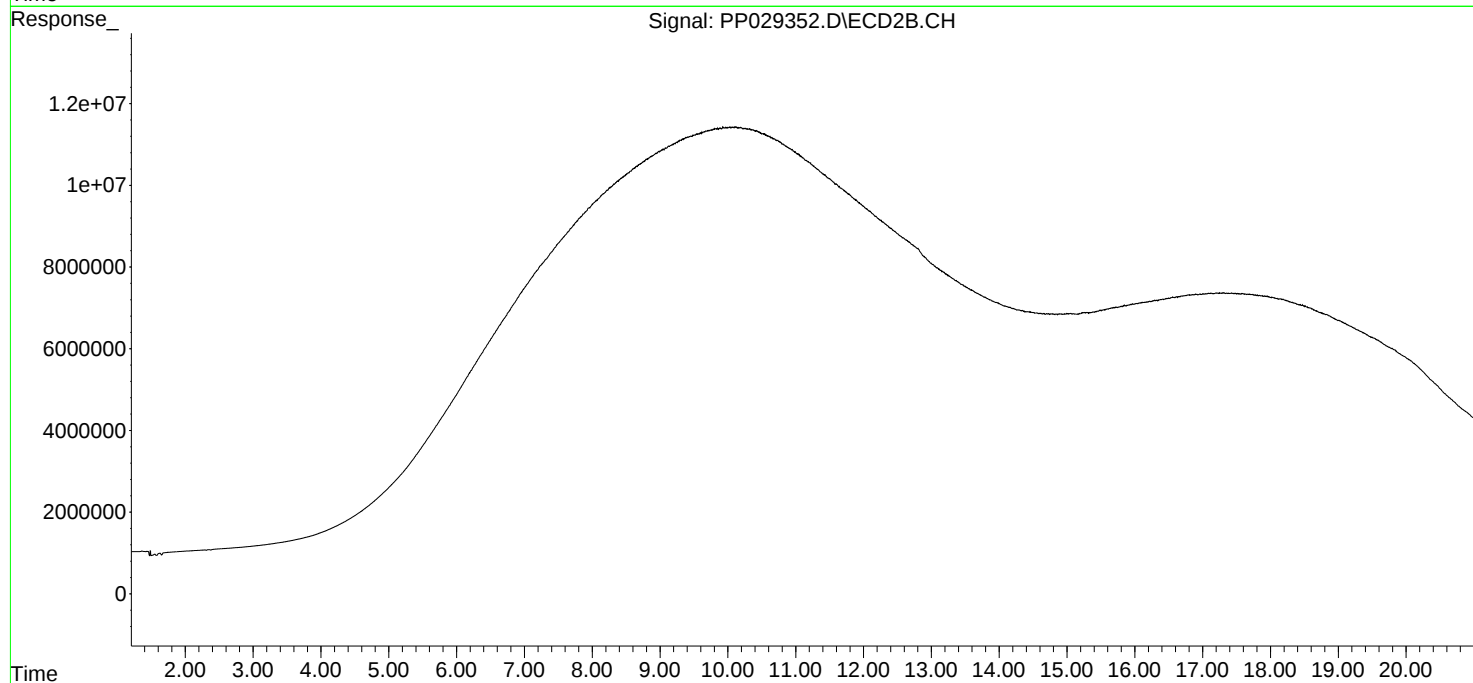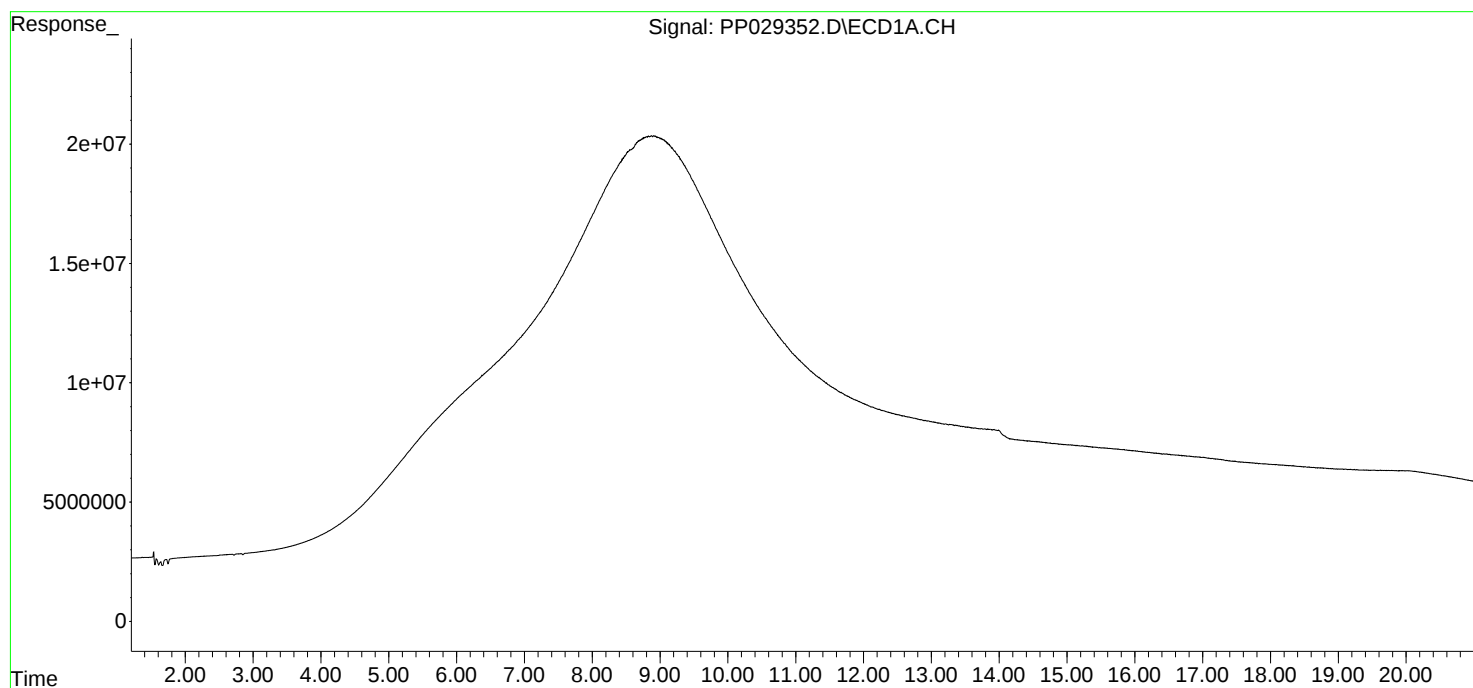


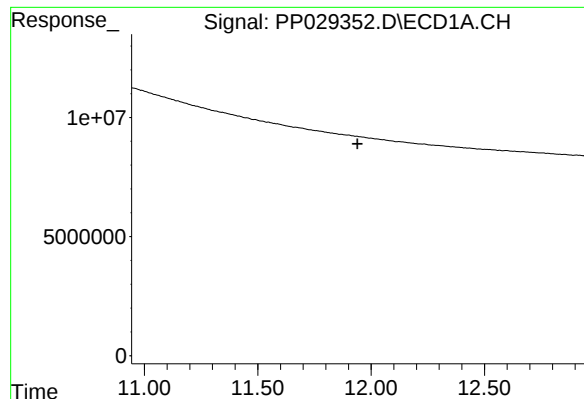

#4 2,4-DCAA

R.T.: 0.000 min
Exp R.T. : 11.940 min
Response: 0
Conc: N.D.

Instrument :
ECD_P
ClientSampleId :
HEXANE

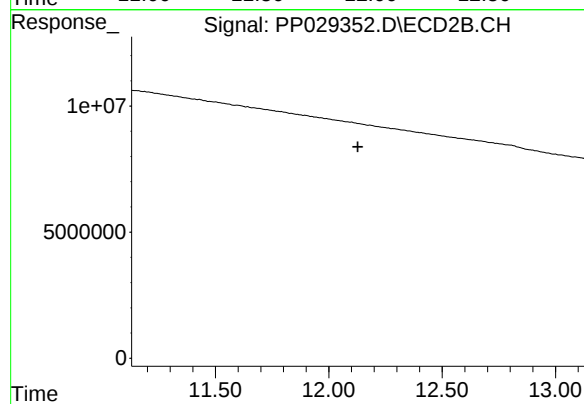

#4 2,4-DCAA

R.T.: 0.000 min
Exp R.T. : 12.129 min
Response: 0
Conc: N.D.