

Data Path : Z:\pestpcbsrv\HPCHEM1\ECD_S\Data\PS040619\
Data File : PS004004.D
Signal(s) : Signal #1: ECD1A.ch Signal #2: ECD2B.ch
Acq On : 06 Apr 2019 08:46
Operator : EI\SJ
Sample : HEXANE
Misc :
ALS Vial : 1 Sample Multiplier: 1

Instrument :
ECD_S
ClientSampleId :
HEXANE

Integration File signal 1: autoint1.e
Integration File signal 2: autoint2.e
Quant Time: Apr 08 01:06:01 2019
Quant Method : Z:\pestpcbsrv\HPCHEM1\ECD_S\Method\PS032619.M
Quant Title : 8080.M
QLast Update : Wed Mar 27 05:52:44 2019
Response via : Initial Calibration
Integrator: ChemStation

Volume Inj. : 2 µl
Signal #1 Phase : Rtx-CLPesticides Signal #2 Phase: Rtx-CLPesticides2
Signal #1 Info : 30M x 0.32mm x0.5 Signal #2 Info : 30M x 0.32mm x 0.25µm

Compound	RT#1	RT#2	Resp#1	Resp#2	ng/ml	ng/ml
----------	------	------	--------	--------	-------	-------

System Monitoring Compounds

Target Compounds



(f)=RT Delta > 1/2 Window (#)=Amounts differ by > 25% (m)=manual int.


Data Path : Z:\pestpcbsrv\HPCHEM1\ECD_S\Data\PS040619\
Data File : PS004004.D
Signal(s) : Signal #1: ECD1A.ch Signal #2: ECD2B.ch
Acq On : 06 Apr 2019 08:46
Operator : EI\SJ
Sample : HEXANE
Misc :
ALS Vial : 1 Sample Multiplier: 1

Instrument :
ECD_S
ClientSampleId :
HEXANE

Integration File signal 1: autoint1.e
Integration File signal 2: autoint2.e
Quant Time: Apr 08 01:06:01 2019
Quant Method : Z:\pestpcbsrv\HPCHEM1\ECD_S\Method\PS032619.M
Quant Title : 8080.M
QLast Update : Wed Mar 27 05:52:44 2019
Response via : Initial Calibration
Integrator: ChemStation

Volume Inj. : 2 μ l
Signal #1 Phase : Rtx-CLPesticides Signal #2 Phase: Rtx-CLPesticides2
Signal #1 Info : 30M x 0.32mm x 0.5 Signal #2 Info : 30M x 0.32mm x 0.25 μ m

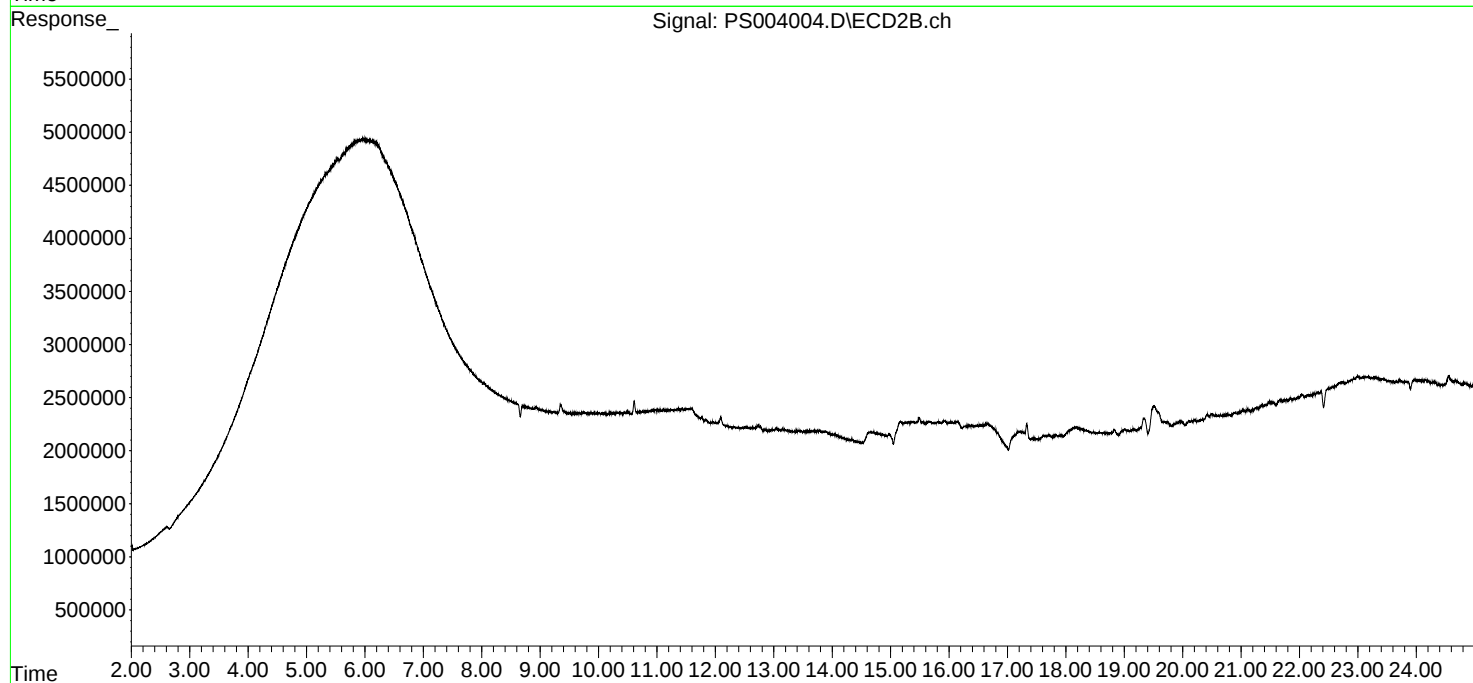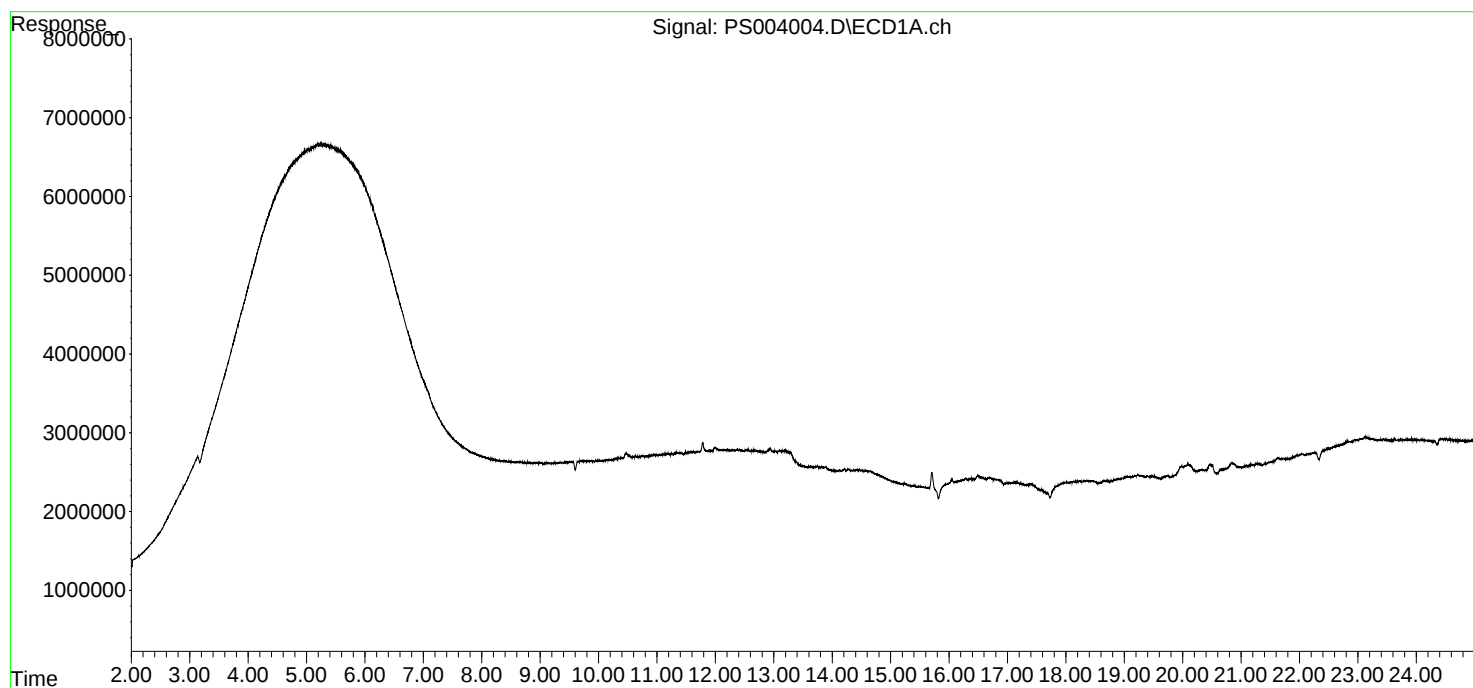


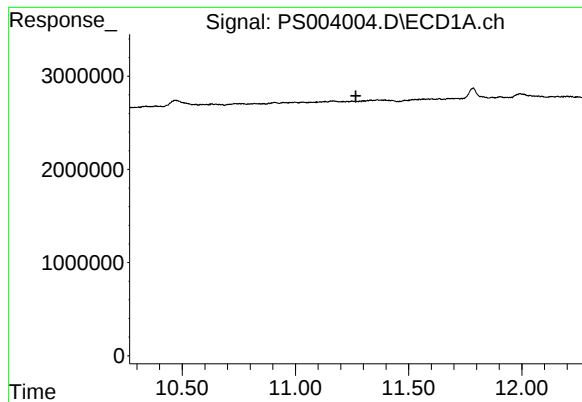

#4 2,4-DCAA

R.T.: 0.000 min
Exp R.T. : 11.267 min
Response: 0
Conc: N.D.

Instrument :
ECD_S
ClientSampleId :
HEXANE

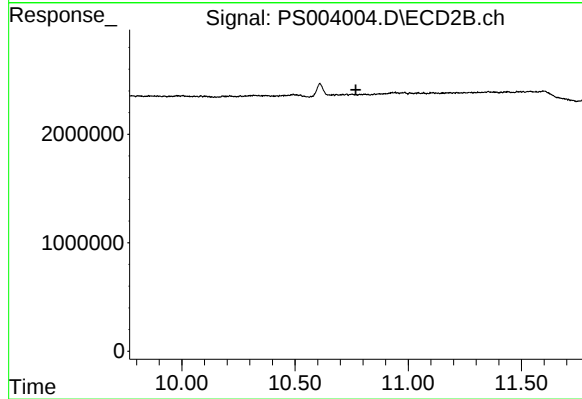

#4 2,4-DCAA

R.T.: 0.000 min
Exp R.T. : 10.769 min
Response: 0
Conc: N.D.