

Data Path : Z:\pestpcbsrv\HPCHEM1\ECD_S\Data\PS081219\
Data File : PS005991.D
Signal(s) : Signal #1: ECD1A.ch Signal #2: ECD2B.ch
Acq On : 12 Aug 2019 08:44
Operator : SM\AJ
Sample : HEXANE
Misc :
ALS Vial : 1 Sample Multiplier: 1

Instrument :
ECD_S
ClientSampleId :
HEXANE

Integration File signal 1: autoint1.e
Integration File signal 2: autoint2.e
Quant Time: Aug 13 04:07:22 2019
Quant Method : Z:\pestpcbsrv\HPCHEM1\ECD_S\Method\PS072619.M
Quant Title : 8080.M
QLast Update : Sat Jul 27 00:42:55 2019
Response via : Initial Calibration
Integrator: ChemStation

Volume Inj. : 2 µl
Signal #1 Phase : Rtx-CLPesticides Signal #2 Phase: Rtx-CLPesticides2
Signal #1 Info : 30M x 0.32mm x0.5 Signal #2 Info : 30M x 0.32mm x 0.25µm

Compound	RT#1	RT#2	Resp#1	Resp#2	ng/ml	ng/ml
----------	------	------	--------	--------	-------	-------

System Monitoring Compounds

Target Compounds



(f)=RT Delta > 1/2 Window (#)=Amounts differ by > 25% (m)=manual int.


Data Path : Z:\pestpcbsrv\HPCHEM1\ECD_S\Data\PS081219\
Data File : PS005991.D
Signal(s) : Signal #1: ECD1A.ch Signal #2: ECD2B.ch
Acq On : 12 Aug 2019 08:44
Operator : SM\AJ
Sample : HEXANE
Misc :
ALS Vial : 1 Sample Multiplier: 1

Instrument :
ECD_S
ClientSampleId :
HEXANE

Integration File signal 1: autoint1.e
Integration File signal 2: autoint2.e
Quant Time: Aug 13 04:07:22 2019
Quant Method : Z:\pestpcbsrv\HPCHEM1\ECD_S\Method\PS072619.M
Quant Title : 8080.M
QLast Update : Sat Jul 27 00:42:55 2019
Response via : Initial Calibration
Integrator: ChemStation

Volume Inj. : 2 µl
Signal #1 Phase : Rtx-CLPesticides Signal #2 Phase: Rtx-CLPesticides2
Signal #1 Info : 30M x 0.32mm x 0.5 Signal #2 Info : 30M x 0.32mm x 0.25µm

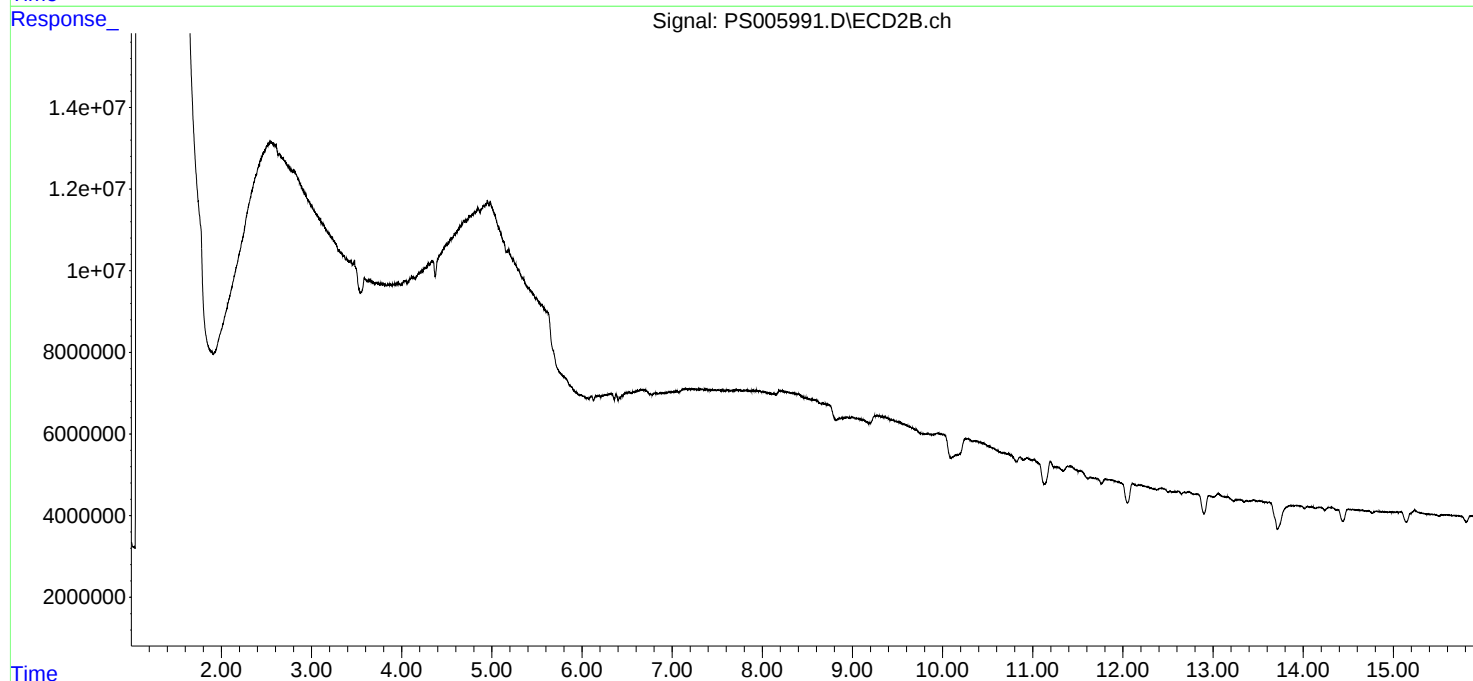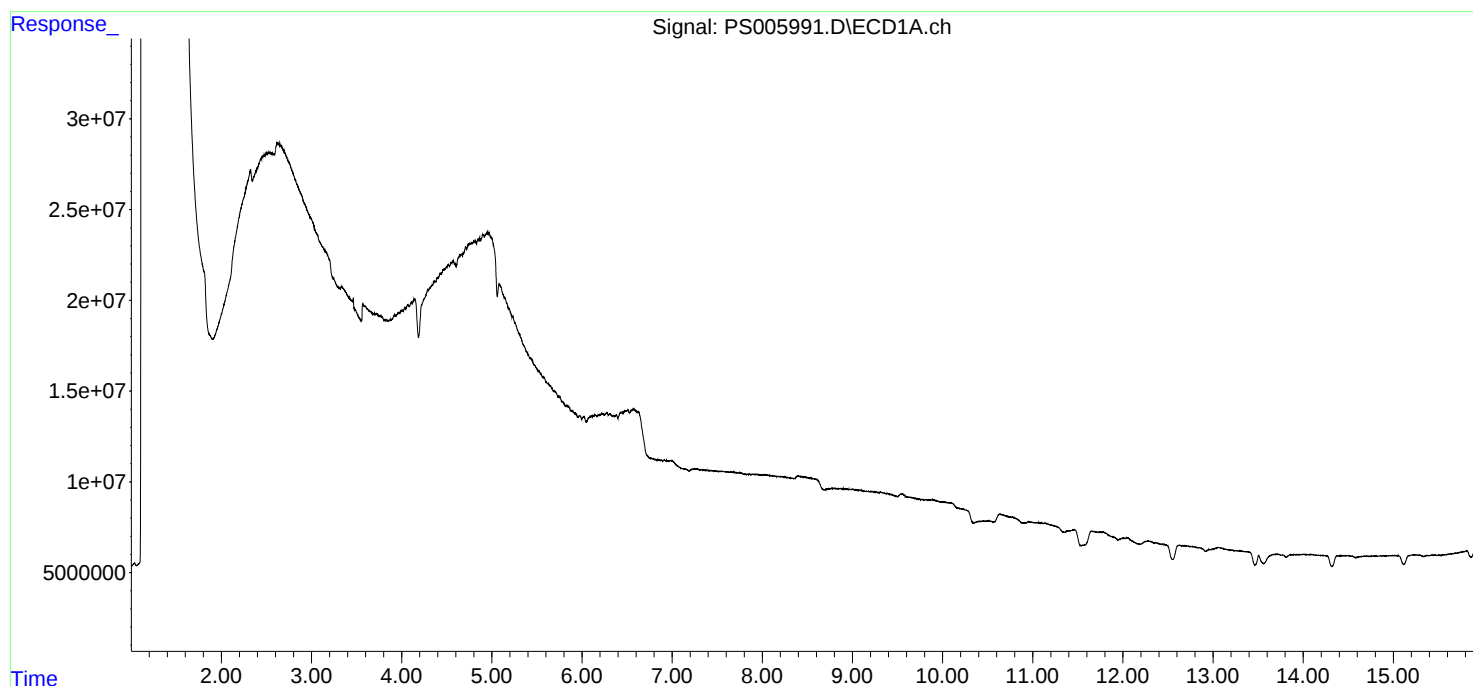


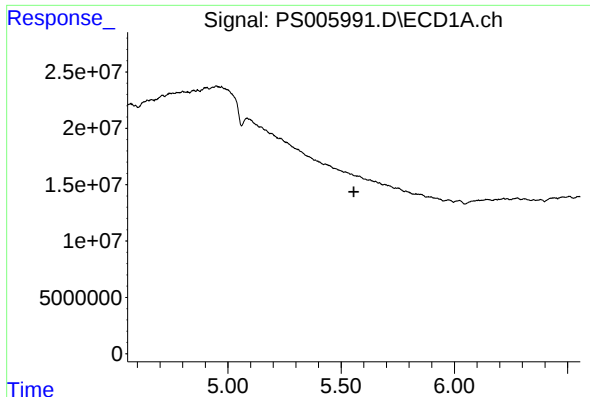

#4 2,4-DCAA

R.T.: 0.000 min
Exp R.T. : 5.556 min
Response: 0
Conc: N.D.

Instrument :
ECD_S
ClientSampleId :
HEXANE

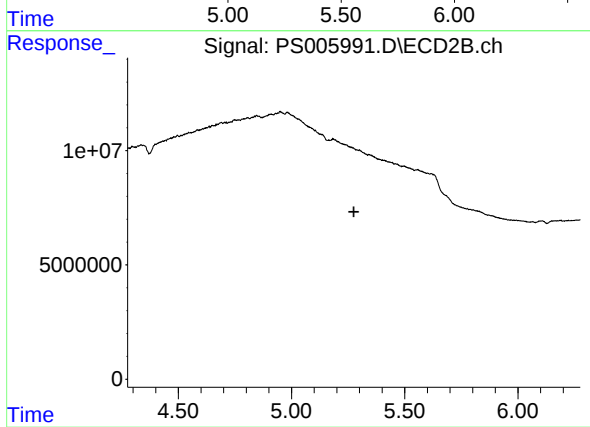

#4 2,4-DCAA

R.T.: 0.000 min
Exp R.T. : 5.276 min
Response: 0
Conc: N.D.