

Data Path : Z:\VOASRV\HPCHEM1\MSVOA U\DATA\VU121019\
Data File : VU036117.D
Acq On : 11 Dec 2019 05:49
Operator : JC/MD
Sample : K6214-04
Misc : 25.0mL/MSVOA U/WATER
ALS Vial : 50 Sample Multiplier: 1

Instrument :
MSVOA_U
ClientSampleId :
BD806

Integration Parameters: rteint.p
Integrator: RTE
Smoothing : ON Filtering: 5
Sampling : 1 Min Area: 3 % of largest Peak
Start Thrs: 0.1 Max Peaks: 100
Stop Thrs : 0 Peak Location: TOP

If leading or trailing edge < 100 prefer < Baseline drop else tangent >
Peak separation: 5

Method : Z:\VOASRV\HPCHEM1\MSVOA_U\METHOD\SOMUTR120919WMA.M
Title : TRACE VOA SOM01.0

Signal : TIC

peak #	R.T. min	first scan	max scan	last scan	PK TY	peak height	corr. area	corr. % max.	% of total
1	4.716	1026	1050	1115	rBV	18386213	41775140	13.40%	11.390%
2	6.584	1613	1631	1665	rBV	6961022	13199908	4.23%	3.599%
3	8.603	2236	2259	2276	rBV5	145467883	311793064	100.00%	85.011%




Sum of corrected areas: 366768112

Data Path : Z:\V0ASRV\HPCHEM1\MSVOA U\DATA\VU121019\
Data File : VU036117.D
Acq On : 11 Dec 2019 05:49
Operator : JC/MD
Sample : K6214-04
Misc : 25.0mL/MSVOA U/WATER
ALS Vial : 50 Sample Multiplier: 1

Instrument :
MSVOA_U
ClientSampleId :
BD806

Quant Method : Z:\V0ASRV\HPCHEM1\MSVOA_U\METHOD\SOMUTR120919WMA.M
Quant Title : TRACE VOA SOM01.0

TIC Library : C:\DATABASE\NIST11.L
TIC Integration Parameters: LSCINT.P

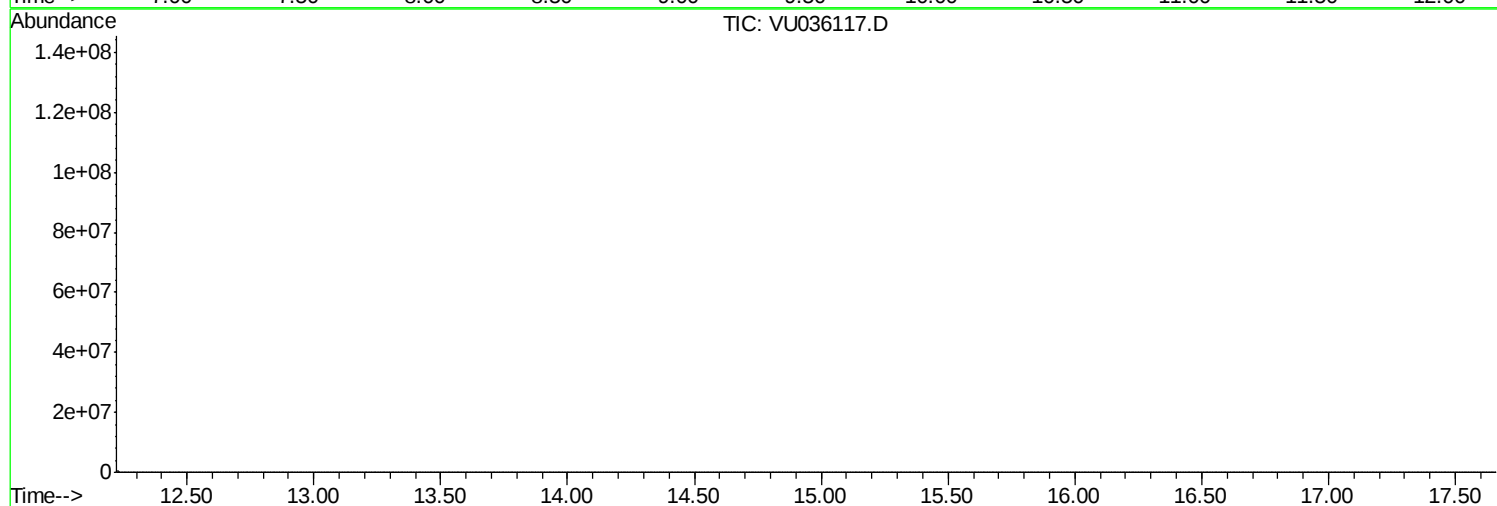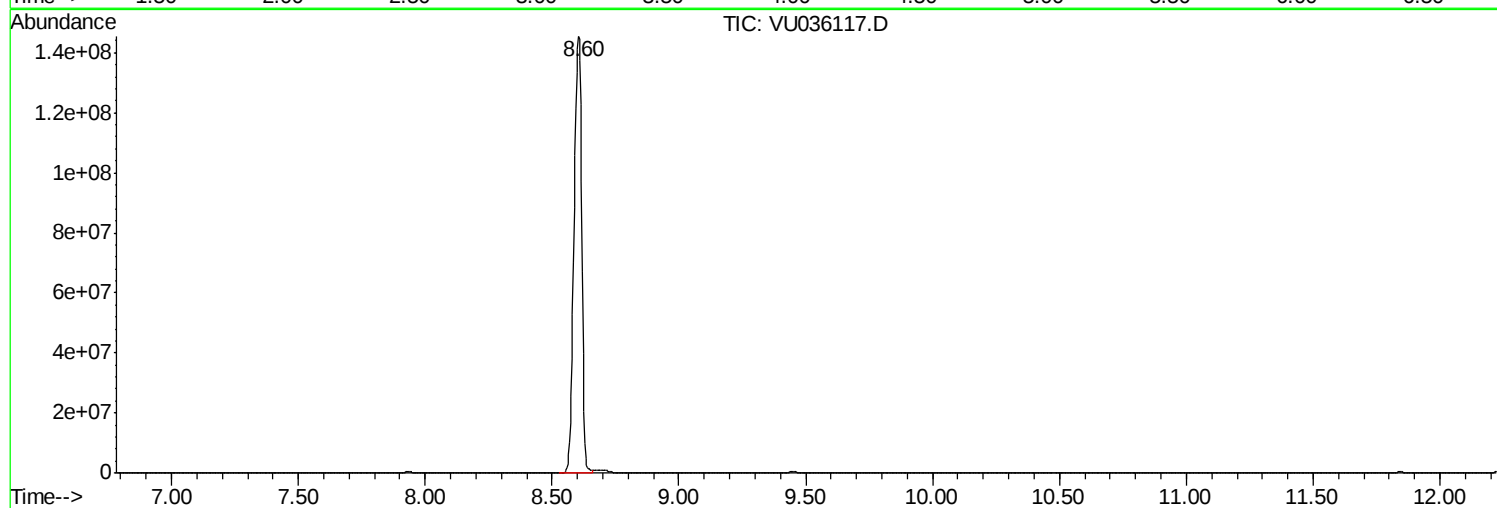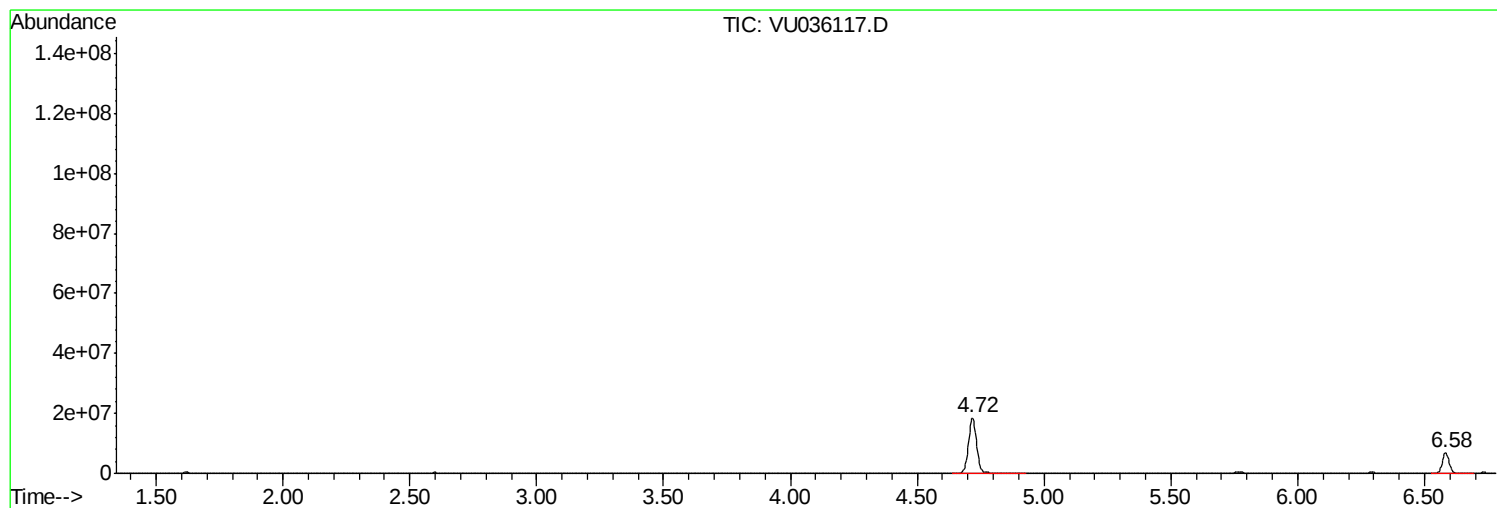

Data Path : Z:\V0ASRV\HPCHEM1\MSVOA_U\DATA\VU121019\
Data File : VU036117.D
Acq On : 11 Dec 2019 05:49
Operator : JC/MD
Sample : K6214-04
Misc : 25.0mL/MSVOA_U/WATER
ALS Vial : 50 Sample Multiplier: 1

Instrument :
MSVOA_U
ClientSampleId :
BD806

Quant Method : Z:\V0ASRV\HPCHEM1\MSVOA_U\METHOD\SOMUTR120919WMA.M
Quant Title : TRACE VOA SOM01.0

TIC Library : C:\DATABASE\NIST11.L
TIC Integration Parameters: LSCINT.P

No Library Search Compounds Detected

Data Path : Z:\VOASRV\HPCHEM1\MSVOA_U\DATA\VU121019\
Data File : VU036117.D
Acq On : 11 Dec 2019 05:49
Operator : JC/MD
Sample : K6214-04
Misc : 25.0mL/MSVOA_U/WATER
ALS Vial : 50 Sample Multiplier: 1

Instrument :
MSVOA_U
ClientSampleId :
BD806

Quant Method : Z:\VOASRV\HPCHEM1\MSVOA_U\METHOD\SOMUTR120919WMA.M
Quant Title : TRACE VOA SOM01.0

TIC Library : C:\DATABASE\NIST11.L
TIC Integration Parameters: LSCINT.P

TIC Top Hit name	RT	EstConc	Units	Response	---Internal Standard---
					# RT Resp Conc